



Creation		Revision	
date:	22-NOV-2010	date:	
by:	Ivon LeBlanc	by:	

Hose Caddy Drive Chain

This instruction sheet will assist in the Cadman 6010 Hose Caddy drive chain upgrade.

⚠ WARNING:

This upgrade must be done **ONLY** when the machine is shut down and is in a non-loaded condition. This means that no fluid is being pumped through the motor and all mechanical and hydraulic tension has been released from the hose rewind system.



Remove brake handle.




Remove 5 bolts. Remove side shield.



Remove forward chain guard.




Rotate drum to expose master link.

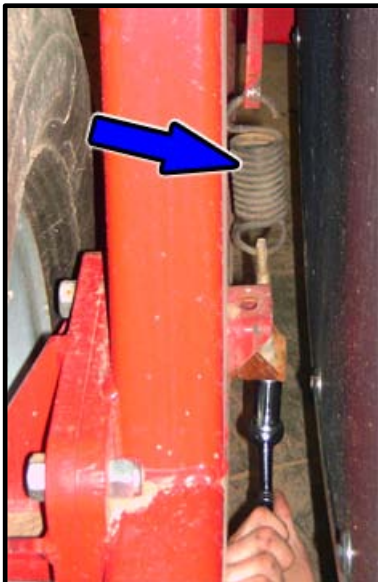

Remove chain tensioner spring by slowly loosening nut with ratchet wrench.



Remove stationary idler sprocket.

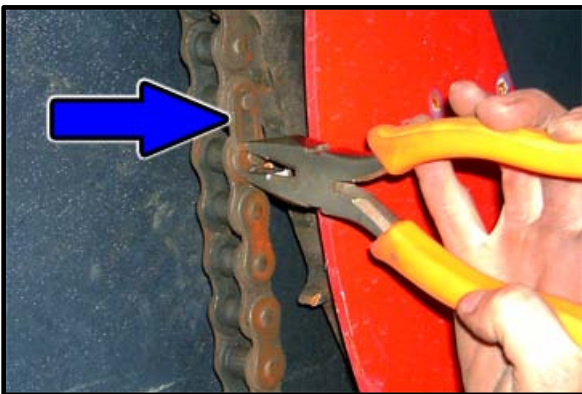

Remove master link on drive chain.




Count 7 links from master link and remove.
Use a grinder to remove rivets or use a
chain braking tool.



Use a punch to remove cut link.



Using a chain whale, connect the chain ends re-using the master link.

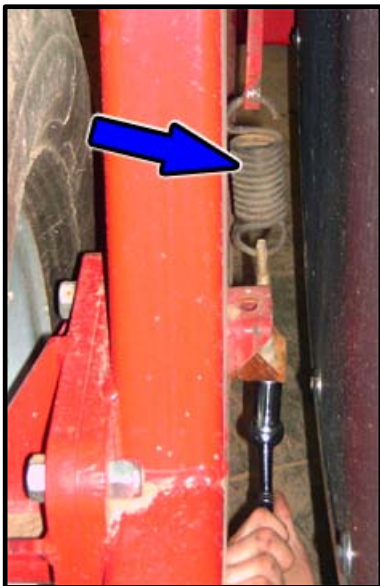

Re-install chain tensioner spring and tighten nut with a ratchet wrench until proper tension is achieved.



Install the new chain guard included in the upgrade package.

⚠ WARNING:

It is very important to cover the exposed chain to prevent injury and/or death.

Congratulations you have successfully completed the Drive Chain upgrade.